




**1. Restore Default Configuration**

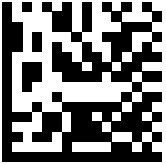


**2. Interface = USB-KBD-ALT**

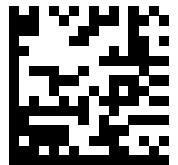


**3. Transmission AIM ID Code = Enable**

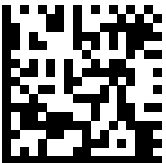


**4. Decoding Normal/Inverse Printing = Enable**

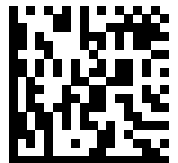


**5a. Global Suffix = [EOT]**

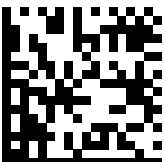


**5b. Global Suffixes: [EOT][CR]**

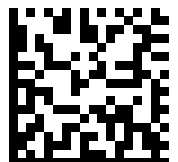


5c. Global Suffixes: [GS][RS][EOT][CR]

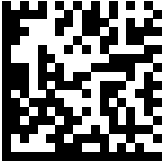

5d. Global Suffixes: [RS][GS][EOT][CR]

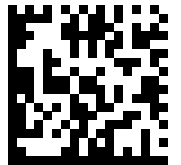

6a. Character Conversion: [GS] to [#] & [RS] to [&]

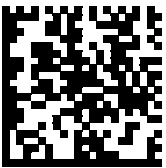

6b. Character conversion: [GS] to **GS** & [RS] to **RS**

