

Modified: Programming Barcodes for DS2278

Configuration name in Utility : Modified
Last Modified : 06-Mar-19
Windows Filename : Config File_DS2278_Modified_2019.03.06.scncfg
Plug-in Name : DS2278-STANDARD SR MODELS + CRADLE-028
Report Type : Only parameters changed from defaults shown



Modified: Programming Barcodes for DS2278

Configuration name in Utility : Modified
Last Modified : 06-Mar-19
Windows Filename : Config File_DS2278_Modified_2019.03.06.scncfg
Plug-in Name : DS2278-STANDARD SR MODELS + CRADLE-028
Report Type : Only parameters changed from defaults shown



Set Defaults

Symbology (bar code type) Settings

Other 2D Symbologies

GS1-Datamatrix	Enable
QR Code	Disable
MicroQR	Disable
Aztec	Disable

UPC EAN

Decode UPC/EAN/JAN Supplementals	Smart Supplemental Mode
----------------------------------	-------------------------

Modify Data- Advanced Data Formatting

Prefix: Enter

7

0

1

3

Suffix 1 CTRL D/END OF TRANSMISSION

1

0

0

Modified: Programming Barcodes for DS2278

Configuration name in Utility : Modified
Last Modified : 06-Mar-19
Windows Filename : Config File_DS2278_Modified_2019.03.06.scncfg
Plug-in Name : DS2278-STANDARD SR MODELS + CRADLE-028
Report Type : Only parameters changed from defaults shown



4

Suffix 2 Enter

7

0

1

3

Scan Data Transmission Format <Data><Suffix 1><Suffix 2>

General Parameter Settings

System

keyboard country type Portuguese Portugal

Transmit Code Id AIM Code ID

Configuration File Modified

Firmware:

SAADFS00-002-R04

Supported Scanner Models for Plug-in :

CR2278-PC10004WW

DS2278-SR00006ZZWW

DS2278-SR00007ZZWW

DS2278-SR00007ZZY